

INSIDER SECRETS ON KEEPING YOUR TENTS CLEAN

Maintaining clean tents is crucial. Clean tents look more professional, last longer, and provide better customer satisfaction.

USE DROP CLOTHS IN THE FIELD

One of the simplest ways to keep your tents cleaner for longer is by using drop cloths. Drop cloths act as a barrier between the ground and your tent. This proactive measure can save you hours in cleaning time later.

UTILIZE TENT BAGS FOR TRANSPORTATION



Invest in high-quality tent bags to keep your tent sections safe and clean during transit. Tent bags not only protect your tents from dirt but also from potential tears and abrasions that can occur in transit or loading and unloading.

INCORPORATE A TENT WASHER FOR DEEP CLEANING



Despite your best efforts, tents get dirty. A CCC tent washer will clean your tents much more thoroughly than hand-washing, with far less effort. Remove stubborn stains and grime, and make your tent look like new. Invest in a CCC Tent Washer to keep your tents spotless and extend their lifespan.

KEEP DEBRIS OFF TENTS WHEN WRAPPING UP

Prevent stains and unnecessary wear-and-tear caused by dirt, debris, falling leaves and more. All of these can become embedded into the fabric, making it harder to clean. Tip: Before disassembling, use a leaf blower to remove dirt, leaves and more.



RINSE OFF WET DEBRIS PROMPTLY

When tents are wet, it's essential to remove debris as quickly as possible. Time is of the essence: make this a top priority, and protect your tents from long-term damage.

IMPLEMENT A NO-STREAMER CLAUSE

Streamers and tent material don't mix. Streamers leave dye that is impossible to remove. Prevent potential long-term damage by implementing a clause in your rental agreements that prohibit the use of streamers on or around the tents.